


dBcover[™]

superior acoustical comfort

INSTALLATION

Before installing, be sure that the subfloor surface is clean, dry and solid.

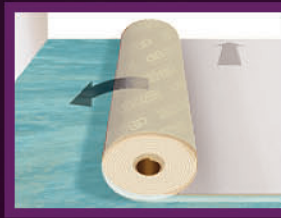

STEP ONE

Start in one corner. Unroll **dBcover** with the Moisture Barrier film in direct contact with the subfloor. Be sure the seam lock tape is next to the wall.



STEP TWO

Cut the roll using a knife or another cutting tool.



STEP THREE

Overlap the next piece of **dBcover** on the surplus film and join the two pieces together lengthwise with adhesive tape. Ensure that the dBcover pieces stay adhered together. Repeat until the subfloor surface work area is covered.



STEP FOUR

Install the flooring directly on top of the **dBcover** product per manufacturer instructions.

Any questions or feedback, please contact **1.855.415.3626**

LIMITED LIFETIME WARRANTY

dBcover.com

DBCORVER IS A TRADEMARK OF DB COVER SOLUTIONS, S.I.

dBcover[™]